

TITLE: ALARMS & TROUBLE CODES

TechNote: 000191

Symptom:

Alarms and Trouble Codes

Error Message:

Solution:

The Ecco 1500 series tank gauge constantly monitoring the system, probes and leak sensors for alarms and trouble conditions.

If there are no active alarm or trouble conditions the system will display “SYSTEM ACTIVE” and the Normal green status light (LED) will be flashing

If an alarm and/or trouble condition is active the system displays Tank or Sensor Channel number, label and the alarm condition.

The system prints an alarm report showing the condition and the date & time when the condition started.

If more than one Alarm or Trouble exist the system display will flash the messages alternately.

Alarms

Alarms indicate a potentially dangerous situation may have occurred.

Do not ignore alarms

Be sure you are familiar with the alarm response procedures for the site.

Troubles

These indicate the system has identified malfunctions in the system hardware.

To silence Alarms and Troubles

Press the ACK key to silence the alarm.

The front panel Alarm and Trouble lights (LEDs) cannot be turned off until the cause of the condition has been rectified.

Similarly the Alarm and trouble will be displayed until the cause of the condition has been rectified.

Related Documents:

TechNote Summary

TechNote Title: Alarms and Trouble Codes

TechNote ID: 000191

Last Updated: April 25, 2005

This information in the TechNote applies to:

Products: EECO 1500

Operating Systems: